HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
CD CHANGER TRUNK MOUNT ATTACHMENT KIT	**1999 ACCORD 2- AND 4-DOOR (INCLUDES V6)**	**All 19999-20305**
		Issue Date **JAN 1999**

Revised January 27, 1999

PARTS LIST

CD Changer Attachment Kit:
2-Door: P/N 08B11-S82-100
4-Door: P/N 08B11-S84-100

Right side bracket

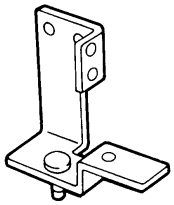

Left side bracket

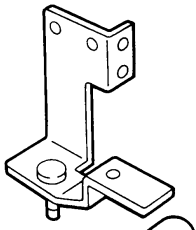

Protector bar

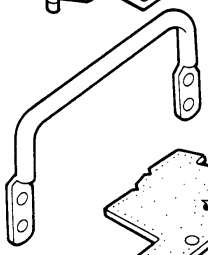

Cover (4- door only)

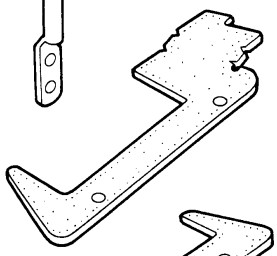

Cover (2-door only)

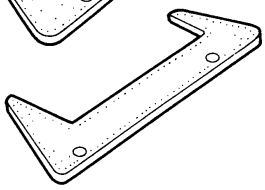

2 Short clips

2 Long clips

Bus cable

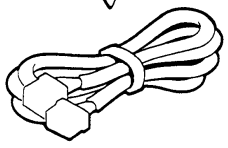

2 Cap nuts

2 Brackets

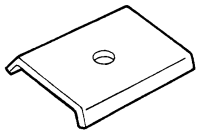

4 Butyl O-rings

8 Cushion tapes

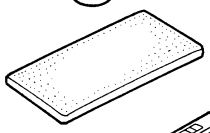

Wire tie

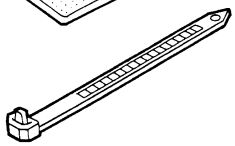

4 Washer-screws, 4 x 8 mm

4 Washer-screws, 5 x 10 mm

2 Washers

CD Changer (sold separately):
P/N 08A06-181-420

CD changer

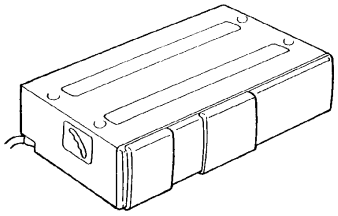

4 Washer-screws, 4 x 6 mm
(Not used)

Adhesive seal sheet



Locking covers

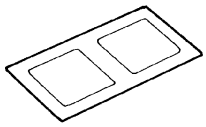

CD magazine



Owner's manual



© 1999 American Honda Motor Co., Inc - All Rights Reserved.

TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver
Flat-tip screwdriver
Stubby Phillips screwdriver
10 mm Combination wrench
Tape measure
Drill
5 mm Drill bit
Eye protection (face shield, safety goggles, etc.)
Felt-tip pen
File
Masking tape
Electrical tape
Utility knife
Awl
Gloves
Silicone sealer

Illustration of the CD Changer Installed on the Vehicle

2-DOOR:

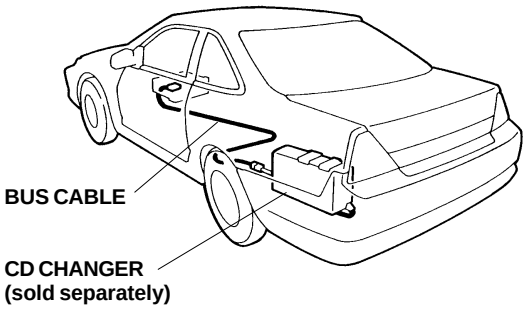

4-DOOR:

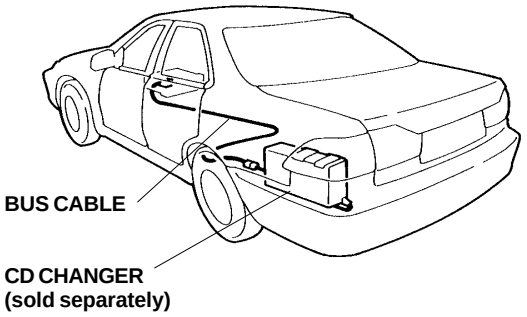

INSTALLATION

Customer Information: The information in this Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- For operation of the CD changer, refer to the owner's manual furnished with the CD changer.
- On V6 model, installation of the CD changer requires working near the exhaust pipe; allow the exhaust pipe to cool before you install the CD changer.

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
2. Disconnect the negative cable from the battery.
3. Open the trunk lid, then remove the spare tire cover (one clip).

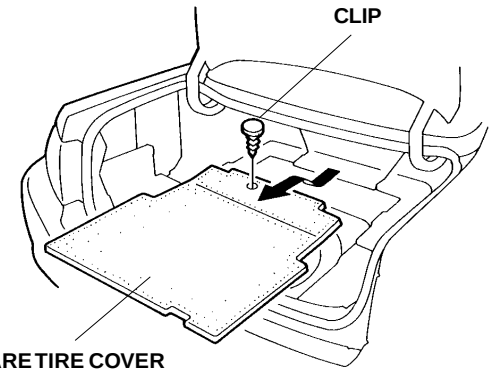

4. Remove the side mat and the left side tray (two plastic screws and four tabs). If the vehicle you're working on is equipped with a cargo net, remove the two hooks.

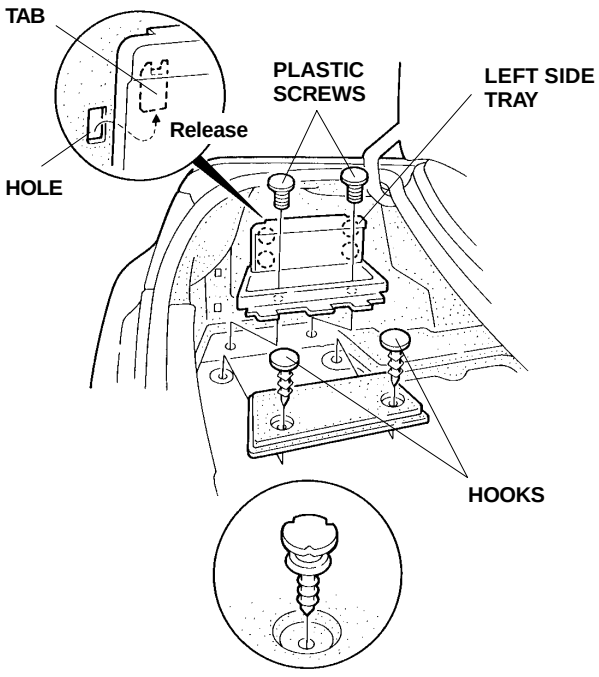

All 19999-20305 (9901)
© 1999 American Honda Motor Co., Inc - All Rights Reserved.

5. While wearing gloves, cut and remove the cover from the left side tray using a utility knife. Discard the left side tray.

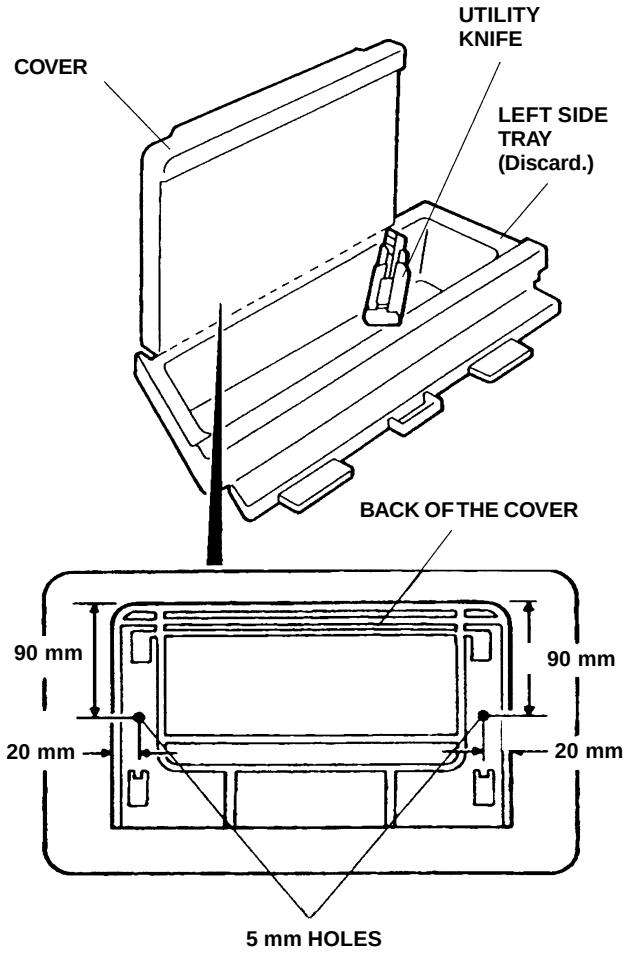

6. File the cut edge of the cover smooth, and remove all burrs.

7. Measure 20 mm from the side, and 90 mm from the top, and mark the cover as shown.

8. While wearing eye protection, drill two 5 mm holes in the back of the cover at the marked locations.

9. Reinstall the cover on the left side lining. Make sure the four tabs fit in the holes of the left side trunk lining.

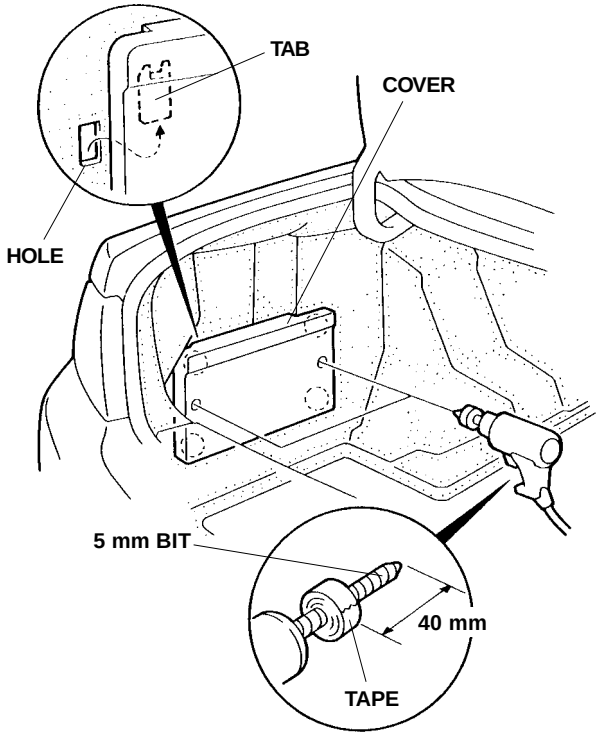

10. Wrap electrical tape around the 5 mm drill bit leaving 40 mm of drill exposed. With the cover in place, and while wearing eye protection, drill 5 mm holes through the holes you drilled in the cover. Do not apply too much pressure against the drill, or the bit could hit and damage the body.

11. Install the two long clips to secure the cover in place.

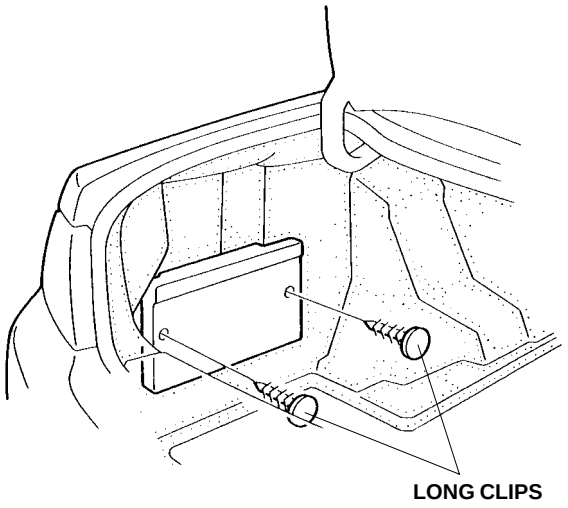

© 1999 American Honda Motor Co., Inc - All Rights Reserved.

12. Carefully unpack the CD changer. Remove the three shipping screws, and discard the shipping cover. Install an adhesive seal (included with the CD changer kit) over each of the three screw holes. Save the shipping screws for your customer in the event the unit needs to be serviced.

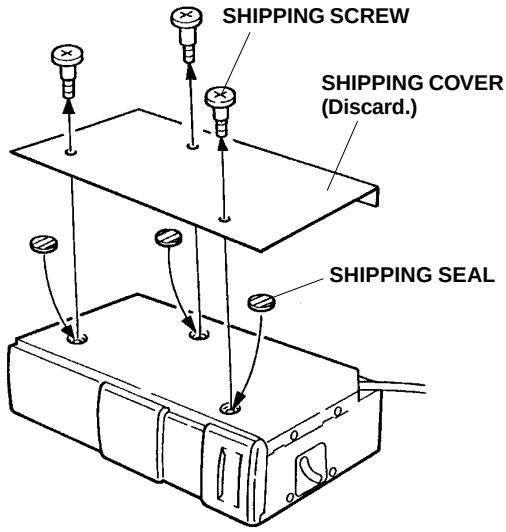

13. Visually check the position of the spring adjusting pin on both sides of the CD changer. If the spring adjusting pins are not in the vertical (V) position, move the pins to the vertical (V) position by sliding them up with an awl.

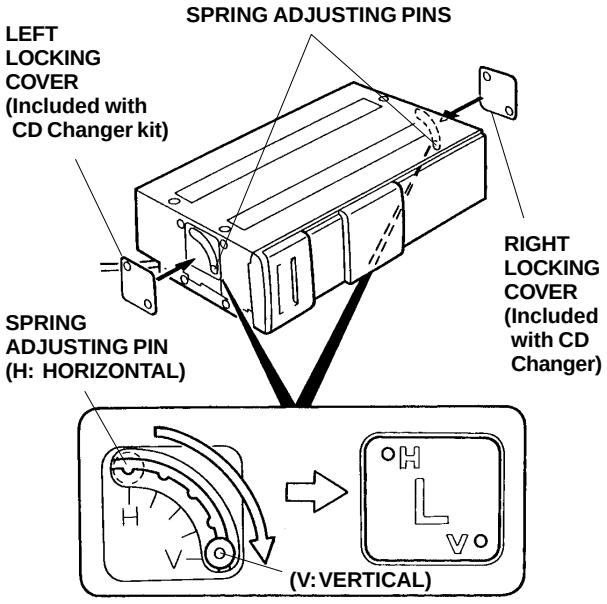

14. Remove the adhesive backing from the “L” and “R” locking covers, and attach them to the sides of the CD changer. Align the diagonally opposite holes with the H and V positions.

15. Install the left side bracket and the right side bracket onto the CD changer using the four 4 x 8 mm washer-screws provided with the CD changer attachment kit.

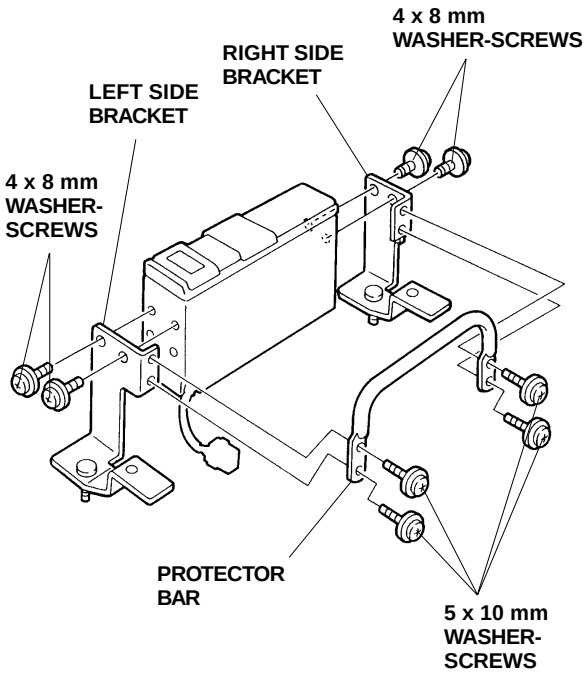

16. Install the protector bar onto the left side bracket and the right side bracket using the four 5 x 10 mm washer-screws.

All 19999-20305 (9901)

© 1999 American Honda Motor Co., Inc - All Rights Reserved.

17. Using a flat-tip screwdriver, remove and discard the two plastic plugs from the holes in the trunk floor.

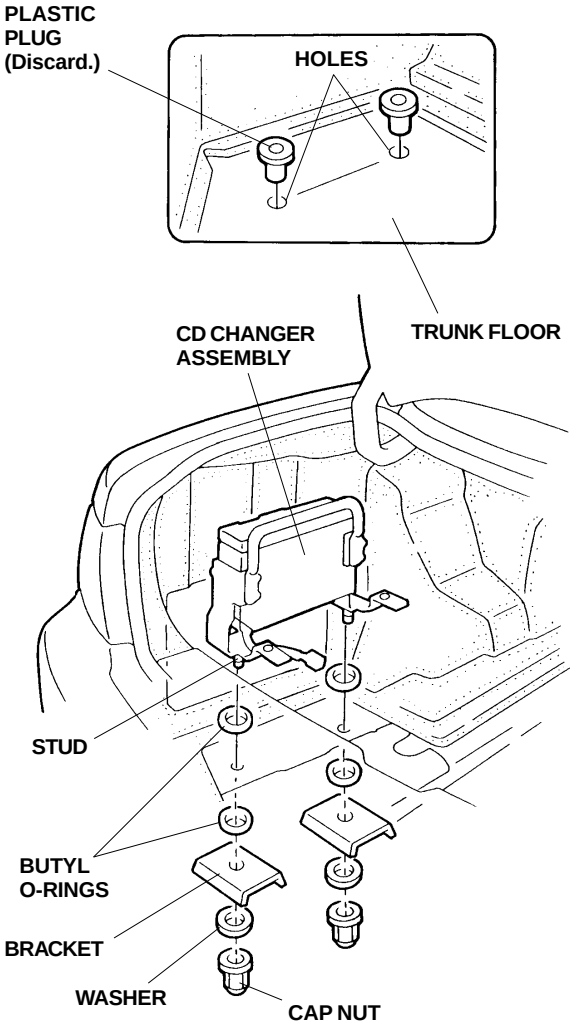

18. Install one butyl O-ring over each stud from the CD changer bracket, then place the CD changer bracket assembly into the trunk pocket, and insert the studs on the bracket through the holes in the trunk floor. Make sure that the CD changer bracket is not interfering with the trunk opener cable.

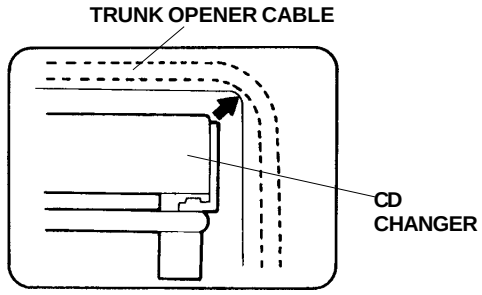

19. From under the vehicle, install one butyl O-ring, one bracket, one washer, and one cap nut onto each stud. Tighten the cap nuts securely.

Removing Covers, Panels, and the Radio

20. Remove the front console lower cover (four clips, and pull).

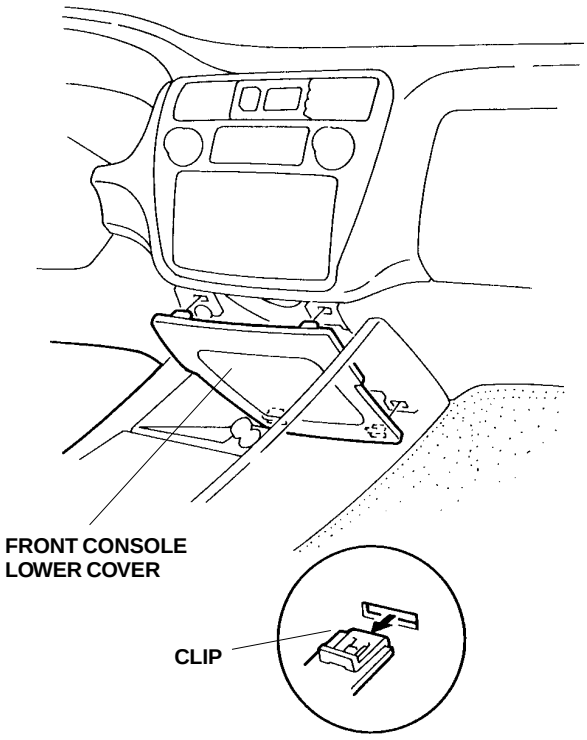

If the vehicle you're working on is equipped with an optional ashtray with cigarette lighter, continue with step 21, if not go to step 22.

21. Remove the ashtray with cigarette lighter (two self-tapping screws, one connector, and four retaining clips).

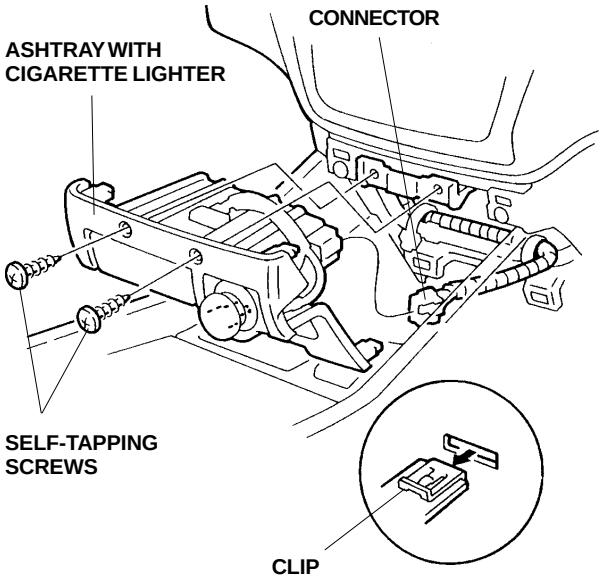

© 1999 American Honda Motor Co., Inc - All Rights Reserved.

22. On A/T model, pry up on the four retaining tabs, and remove the trim ring. On M/T model, remove the shift knob by turning it counterclockwise.

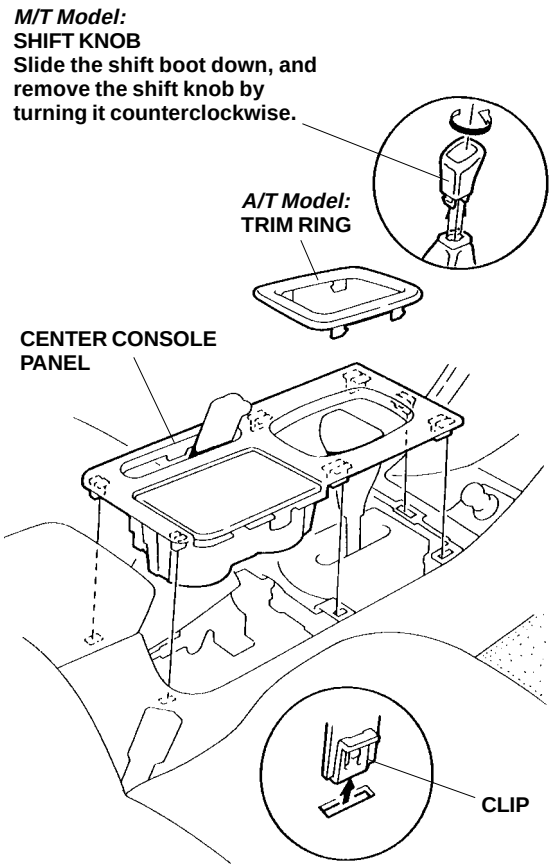

23. Remove the center console panel (seven retaining clips).

24. Attach a piece of masking tape onto the console panel below the block.

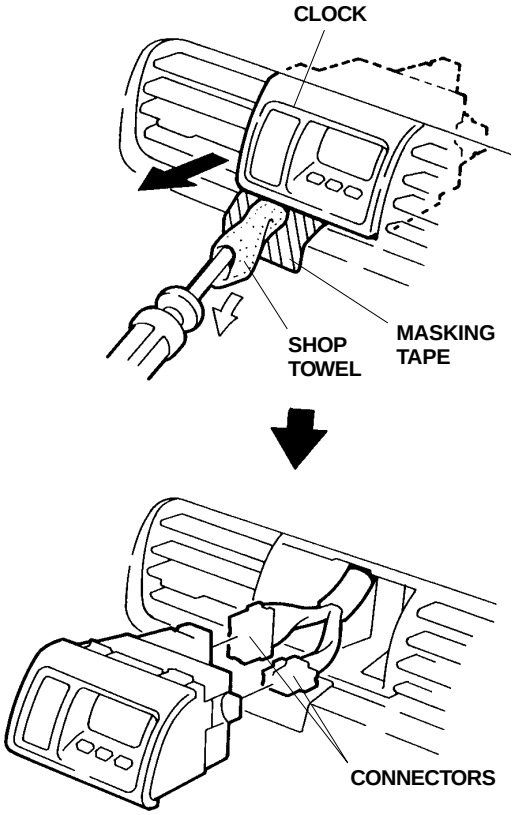

25. Using a flat-tip screwdriver wrapped with a shop towel, gently pry up on the clock to release the clips; then remove the clock by disconnecting the connectors.

26. Remove the console panel (three self-tapping screws, five retaining clips, and two connectors).

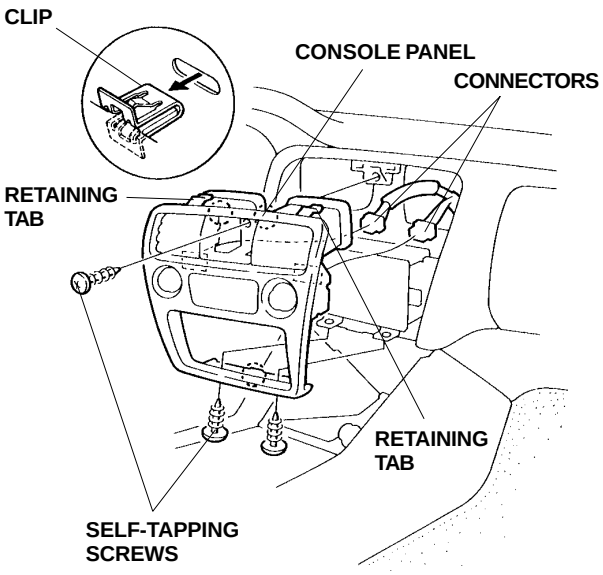

All 19999-20305 (9901)
© 1999 American Honda Motor Co., Inc - All Rights Reserved.

27. Remove the radio (four radio mount bolts, and unplug the radio connector and the antenna lead).

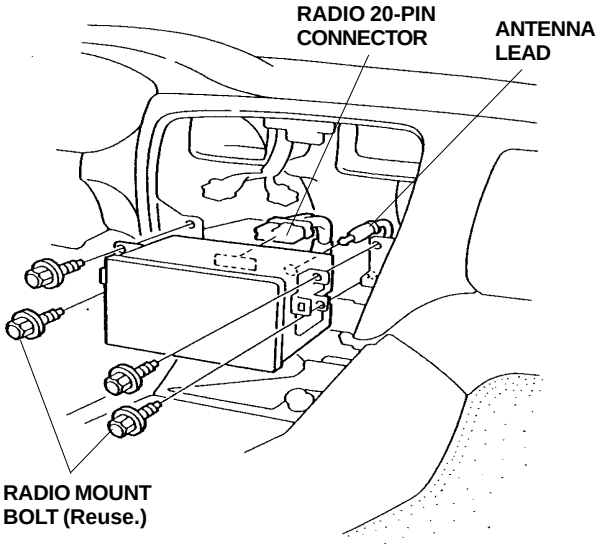

28. *On EX model:* If equipped, remove the optional cassette player.

    - Remove the cover (two washer-screws and two retaining clips).

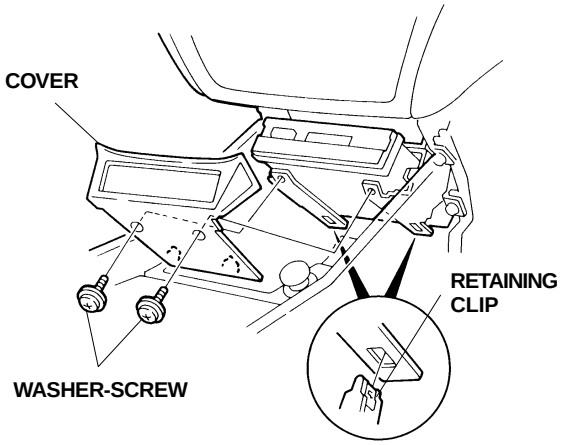

    - Remove the four washer-screws to remove the cassette player.

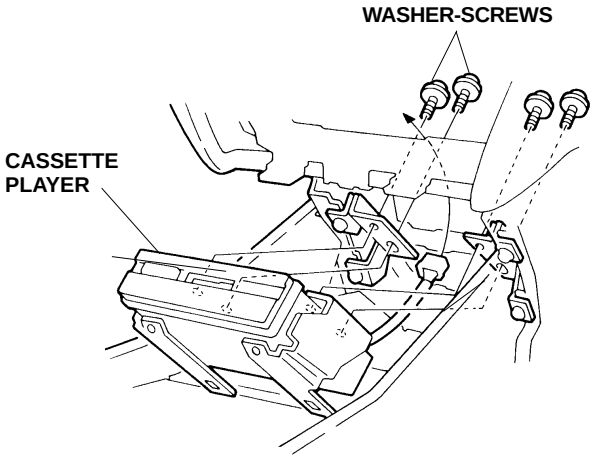

29. Remove the left fuse box cover and the right fuse box cover (three retaining clips and two tabs on each side).

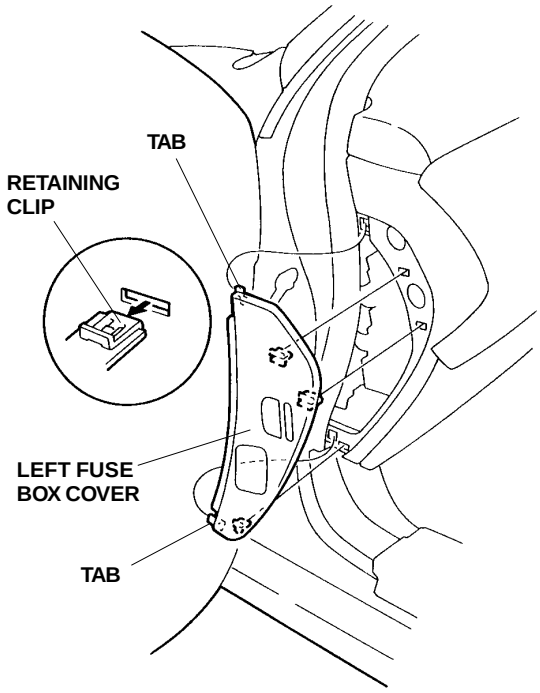

30. Remove the driver's dashboard lower cover (three self-tapping screws and five retaining clips). Take care not to damage the clips.

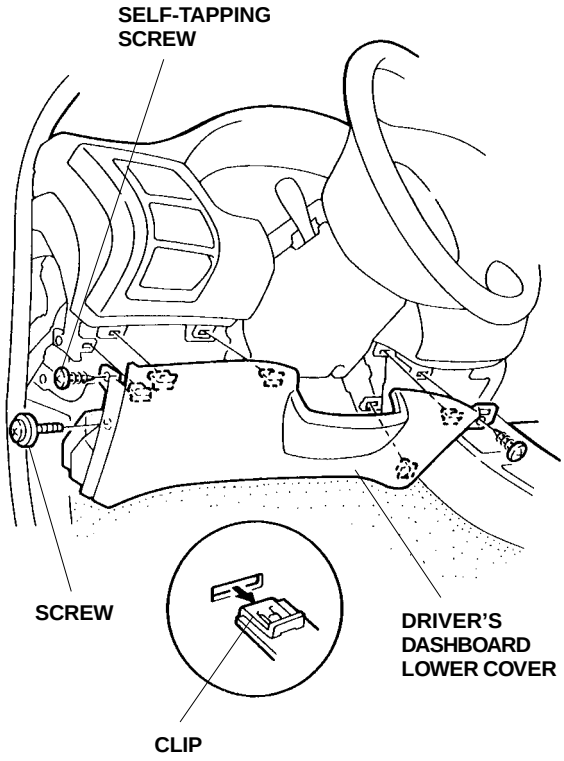

© 1999 American Honda Motor Co., Inc - All Rights Reserved.

31. Remove the passenger's dashboard lower cover (three self-tapping screws and six retaining clips). Take care not to damage the clips.

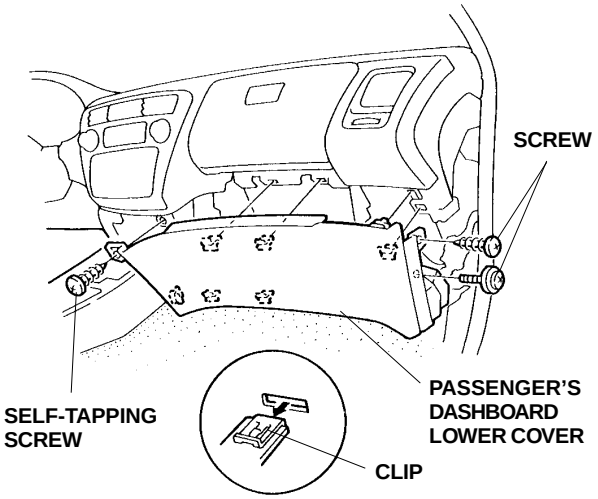

32. Remove the center console:
    - Apply masking tape to the front edges of the center console.

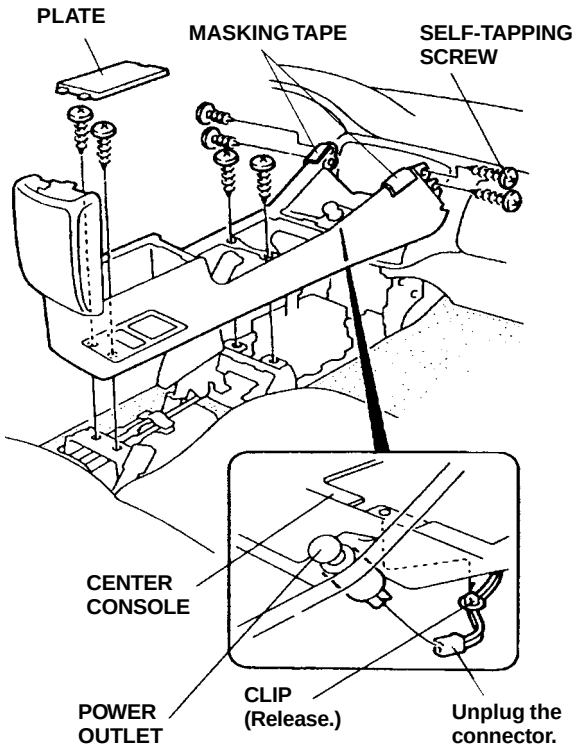

    - Open the armrest and remove the plate.
    - Remove the eight self-tapping screws.
    - Apply the parking brake, and move the shift lever to the N position.
    - Unplug the power outlet connector, and release the connector clip; then lift up the center console.

33. Remove the rear seat cushion (one bolt, and pull up).

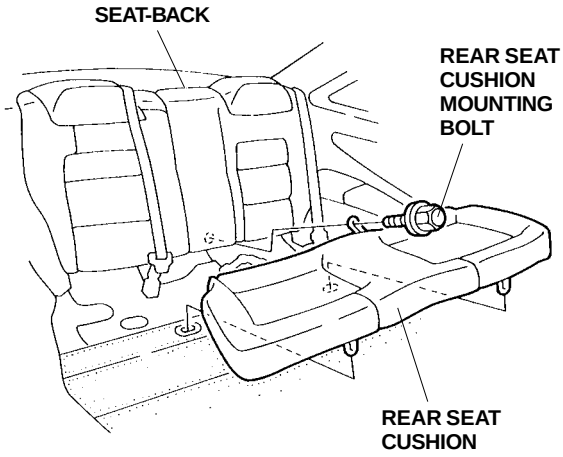

Routing the Bus Cable

34. Route the bus cable forward, around the right dashboard support.

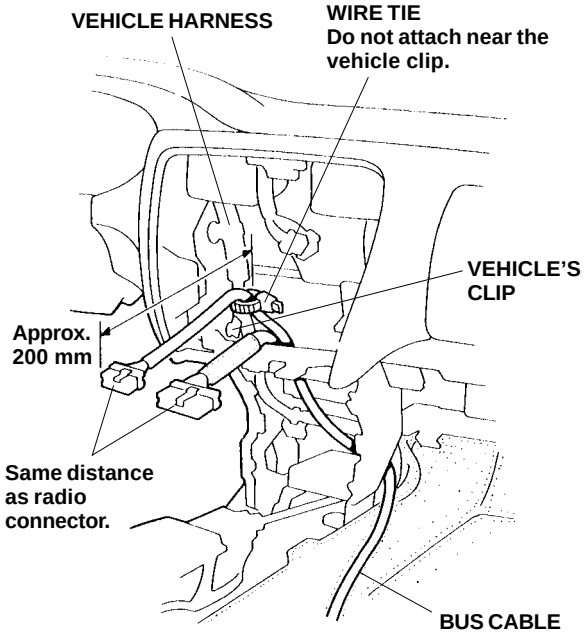

35. Measure about 200 mm of bus cable, and secure the bus cable to the vehicle harness with one wire tie. Cut the excess off the wire tie.

All 19999-20305 (9901)
© 1999 American Honda Motor Co., Inc - All Rights Reserved.

36. Turn over the floor carpet, and route the bus cable toward the rear along the right side of the parking brake lever. Secure the bus cable to the floor with one cushion tape.

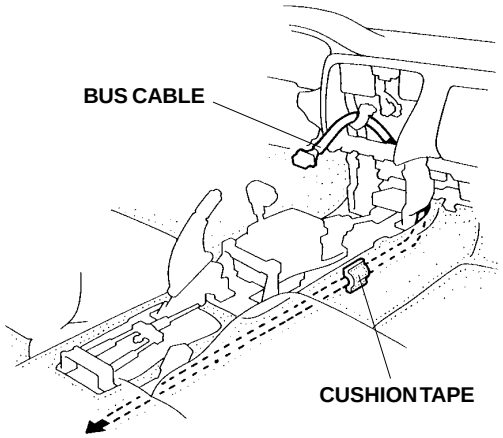

37. Lower the seat-back, and remove the clip. Fold the left side trunk lining back, and continue routing the bus cable through the gap at the trunk side support.

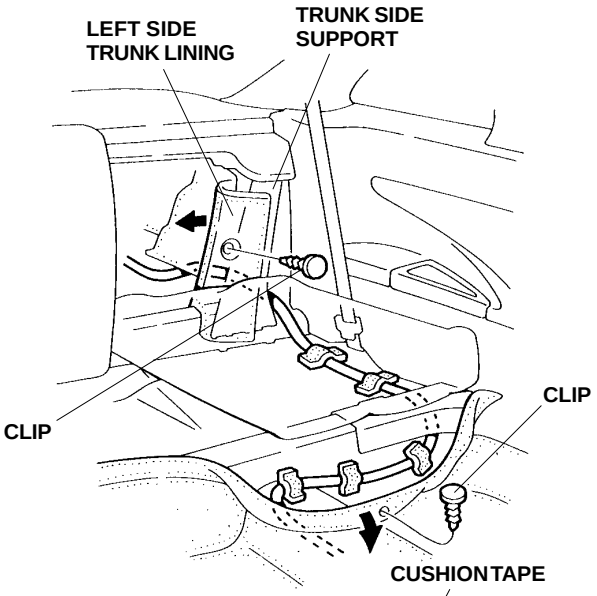

4 DOOR:

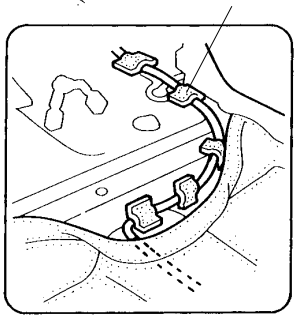

38. Secure the bus cable to the floor panel with five cushion tapes in the areas shown. Reinstall the carpet and the clip.

39. Continue routing the bus cable into the trunk under the left side lining. Connect the bus cable 14-pin connector to the CD changer 14-pin connector.

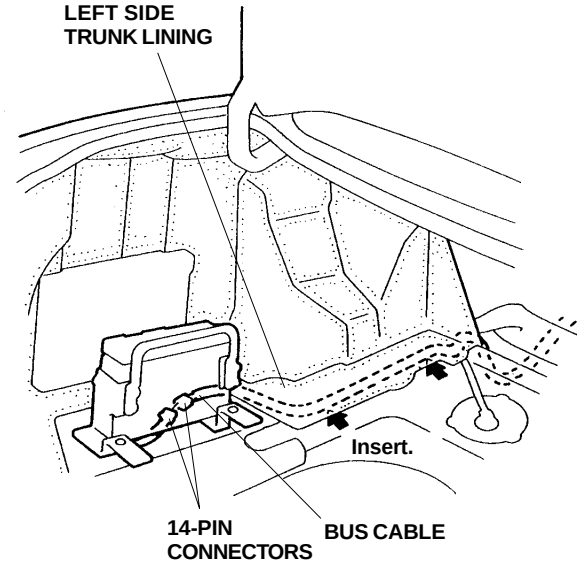

4-DOOR:

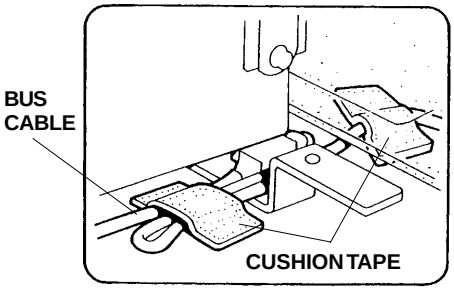

2-DOOR: **Route the bus cable under the CD changer.**

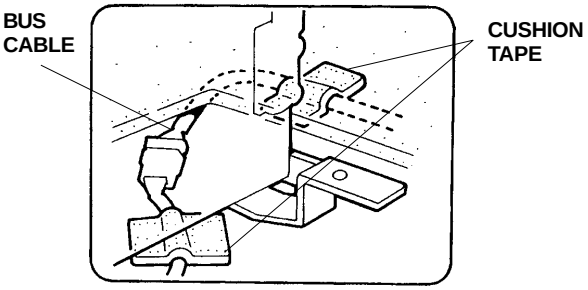

40. Secure the bus cable to the trunk floor with one cushion tape under the left side trunk lining.

41. Fold the excess length of bus cable, and secure it to the trunk floor with one cushion tape.

© 1999 American Honda Motor Co., Inc - All Rights Reserved.

42. Install the cover to the bracket with the two short clips through the holes in the bracket.

43. *On 4-door model:* Insert the tab of the 4-door cover into the hole in the trim, and place the cover along the trim by gently bending the cover into place.

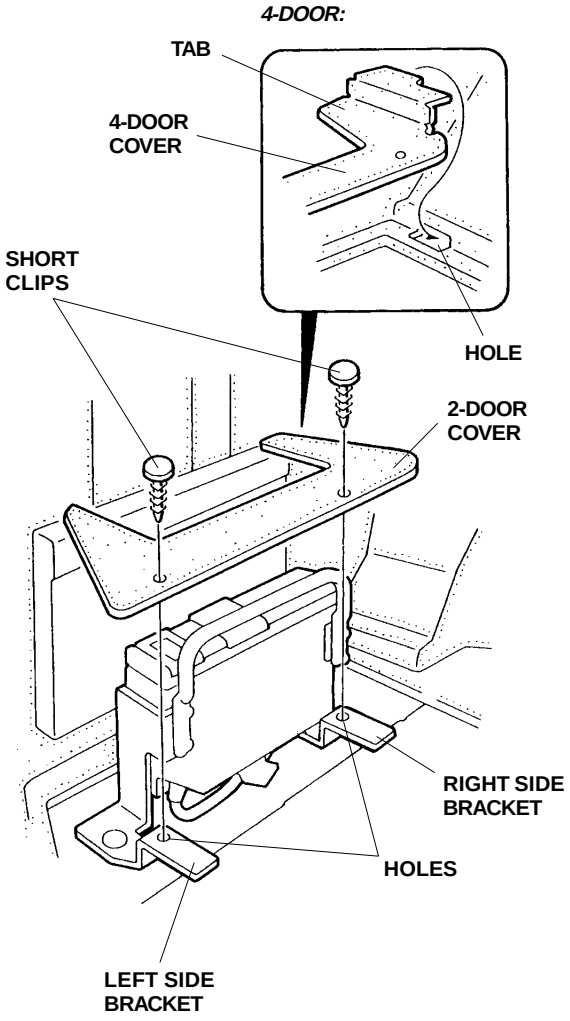

44. Plug in the radio 20-pin connector, the antenna lead, and the bus cable.

- If the vehicle *is not* equipped with an optional cassette player, plug the bus cable into the radio.

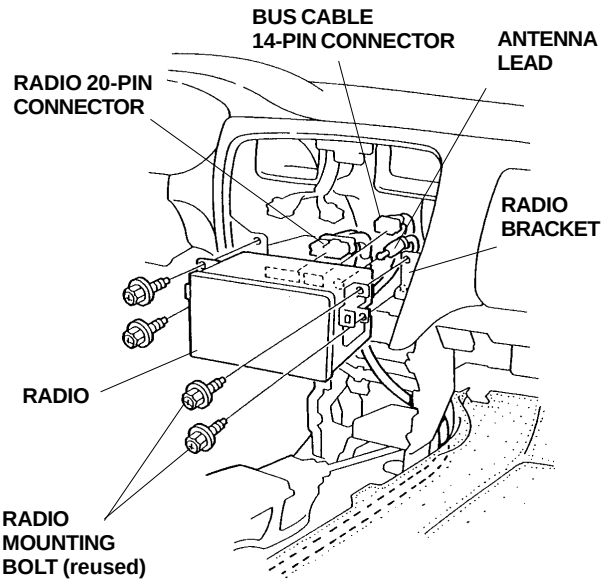

- If the vehicle *is* equipped with an optional cassette player, plug the bus cable from the CD changer into the cassette player, and the plug the cassette player cable into the back of the radio.

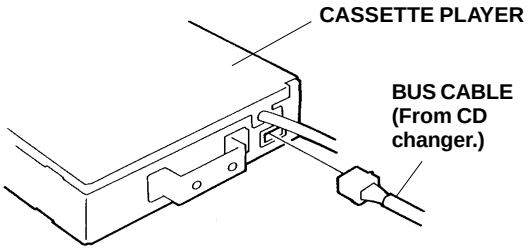

45. Reinstall the radio.

46. Check that all wire harnesses are routed properly and all connectors are plugged in.

47. Check that the radio and the CD changer work properly as described in the respective owner's manuals.

48. Reinstall all removed parts.

49. Remove the masking tape from the center console.

50. Enter the customer's radio anti-theft code, and reset the radio station presets.

51. Reset the clock.

52. Put the CD changer Owner's Manual and the shipping screws (removed in step 12) in the glove box for your customer.

All 19999-20305 (9901)

© 1999 American Honda Motor Co., Inc - All Rights Reserved.